


Telephone User Guide: Model #2554

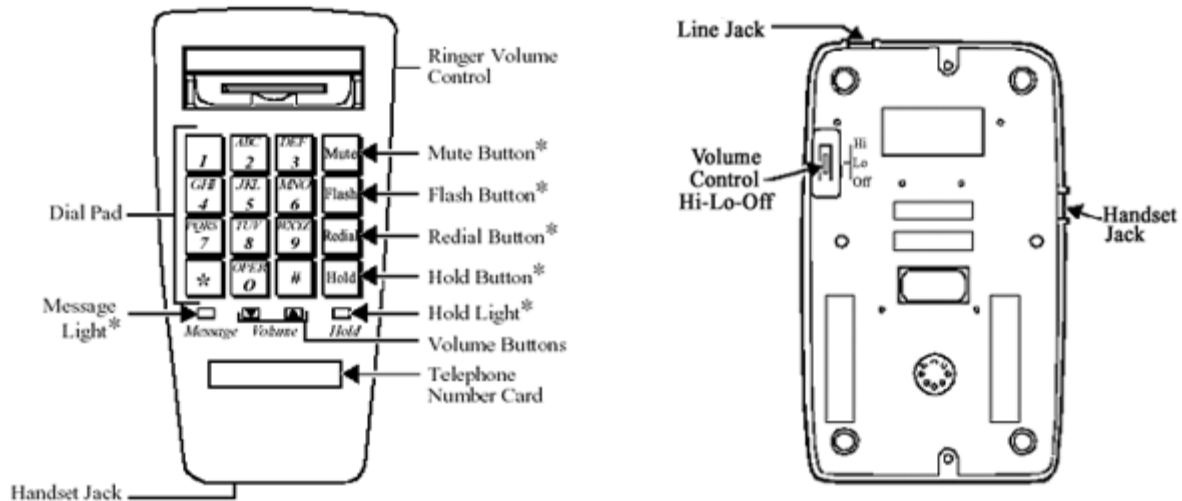

* These five buttons and the Message light appear ONLY on the 2554 YMGP.

Mute Button

Press (and hold down) to turn off the handset microphone. In this way, the other person on the call cannot hear your conversation.

Flash Button

Press instead of pressing the switchhook for features such as Conference with business communications systems or for answering a call-waiting call.

Redial Button

Press to automatically redial the last number you dialed. The telephone retains in memory the last number dialed (up to 28 digits) for a period of 24 hours, provided line power is maintained to the telephone.

Hold Button

Press to put a call on hold until you can return to it. In order to return to the held call, press again, or if you have hung up, pick up the handset. If you desire music-on-hold or a second dial tone, contact your system manager.

Message Light

A red light which flashes when a message has been left for you.

Telephone Number Card

For writing your area code and telephone number or your extension.

Ringer Volume Control

For raising or lowering the volume of the tone ringer on your telephone. There are three settings: High, Low, and Off.

Volume Buttons

For controlling the volume of the speaker in the handset.